




Grease Applicator Kits

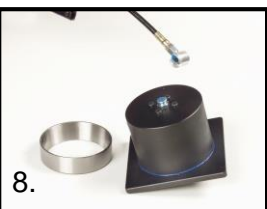

BPW'S Grease Applicator consists of a base (for holding the bearing cone) and a closure plate. On the back of the base is a DIN 3403 grease nipple through which the grease is supplied. From here the grease flows through the annular ducts to the bearing cone filling the cavities between the inner race and rollers. Optimum greasing has been achieved when grease emerges between the closure plate and the base pot.

To open the applicator, simply unscrew the wing-nut so the bearing can be removed.

A separate grease applicator has been developed for each size of bearing to achieve maximum results across all bearing sizes. BPW offers complete applicator sets.

ADVANTAGES

- ❖ Exact quantities of grease **NO** waste
- ❖ Long service life of tapered roller bearings thanks to a **CLEAN** grease fill.
- ❖ Compact, enclosed design for **EASE** of handling.
- ❖ A clean workplace, **NO** grease spillage, **NO** additional cleaning cost.

NOTE: ALWAYS use BPW ECO Li Plus Grease

BPW Part No. Complete set	Qty:	Description:
99.00.000.9.54	1	Applicator to suit roller bearings 33116 and 32310
99.00.000.9.55	1	Applicator to suit roller bearings 33118 and 33213

PLEASE NOTE: Grease Applicator kits consists of: applicators for inner & outer bearings including adapter for flat type grease nipple

